


Wiring IBC readers using B&B Electronics RS422 convertors, models 422CON, 422COR, 422LP25R

February 12 1999 Application Note 006 Page 1

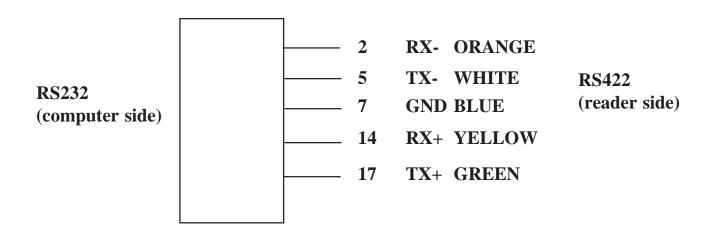

Note: If you make a cable for the RS232 side, make sure that pins 7 and 8 are connected to each other (shunted).